



AccuCut A300 / A400pro / A425pro (4in1) / A445pro (4in1)

Specifications

Models	A300	A400pro	A425pro (4in1)	A445pro (4in1)
Product code	AC001210	AC001215	AC001220	AC001225
Sheet Capacity 80g/m ²	10	10	10	10
Integrated Paper Guide	A4, A5 & A6	A4, A5 & A6	A4, A5 & A6	A3, A4, A5 & A6
Size Guide	Centimetres and Inches	Centimetres and Inches	Centimetres and Inches	Centimetres and Inches
Cutting Length	300mm	300mm	300mm	457mm
Score	Not available	Not available	1-5 sheets	1-5 sheets
Wave Cut	Purchase product 9212WBE	Purchase product 9212WBE	1-5 sheets	1-5 sheets
Perforate	Purchase product 9212PBE	Purchase product 9212PBE	1-10 sheets	1-10 sheets

- 1** Trimmer base with calibrated grid
- 2** Metric and Imperial scale guide
- 3** Transparent paper guide
- 4** Rotary blade / handle assembly
- 5** Safety cutting rail
- 6** Safety cutting mat
- 7** Cutting mat removal groove



NOTE: Please retain this information regarding safe operation of this paper trimmer.



CAUTION: Trimmer should be operated by an adult or under adult supervision



CAUTION: Sharp blade, do not touch the edge of the blade

Operating the Trimmer

- 1** Place the trimmer on a stable, flat surface such as a table or desktop.
- 2** **A.** Push and hold the rotary blade/handle to the top of the guard/pressure bar. **A1.** To change cutting style (A425/A445) push and hold the rotary blade while turning to select the function desired.
- 3** **B.** Place material to be trimmed at the selected position using transparent paper guide and hold material securely in place with left hand while cutting. Grid pattern and scale can be used for alignment.
- 4** **C.** Press down on rotary blade/handle assembly with right hand and slide blade toward you to cut.
- 5** Do not make a return trip cut with the trimmer. Always begin cutting from the top.

Cutting Restrictions

- Remove staples, paper clips etc. before cutting.
- Do not cut metal film, film containing glass etc.
- Do not cut more sheets than cutting capacity allows.
- Do not carry trimmer by holding on to the cutting blade handle.
- Always operate trimmer with both hands and on a stable base or desk.
- Check the fittings of the rotary blade and safety cutting rail from time to time.