

System Controller WV-CU650



PS•Data

One Unit, Total Control

KEY FEATURES

Camera Control

- 3D joystick for single-hand control of pan, tilt, and zoom functions of PTZ cameras.
- Big, easy-to-use numeric keypad for camera position input

Recorder Control

- Jog dial and shuttling make it easy to find digital disk recorder bookmarks and input other settings.
- Equipped with dedicated recorder buttons for recording, playback, and search functions of WJ-HD300, HD500 Series.

Switcher Control

- Note the full array of image switching and sequencing buttons
- Also controls display position and Camera Title On/Off

System Status Display

- LCD shows current unit, monitor and camera numbers. Also shows system and echo back status.

User Setting Button

- Can be set to simplify whatever functions the user prefers

Program Upload Function


- Ensures full support for new products as they become available

SPECIFICATIONS

Power Source		9V DC, 800mA (use the supplied AC adaptor only)
Control	Joystick	3-D
	Jog Shuttle	○
	Function Button	4
	Fixed Button	38
Display	Device	LCD (8cm x 2cm)
	Unit/Monitor/Camera No.	○
	Alarm, Suspend, Busy etc.	○
	Buzzer	○
Communication Interface	RS485	1
	PS-Data	○
	New Terminal Mode	○
	SERIAL (9-pin D-sub)	1
Switches	DIP SW (MODE)	8 bit
	Rotary SW (CU No.)	1 (10 position)
Connection	RS485	4 Controllers/System
Ambient Operating Temperature		-10°C - +50°C (14°F - 122°F)
Ambient Operating Humidity		Less than 90%
Dimensions (W x H x D)		290 x 146 x 221 mm (11-7/16" x 5-3/4" x 8-11/16")
Weight		1.3 kg (2.86 lbs.)


Standard Accessories • AC adaptor • RS485 modular cable (3m) • CD-ROM

MAJOR OPERATING CONTROLS

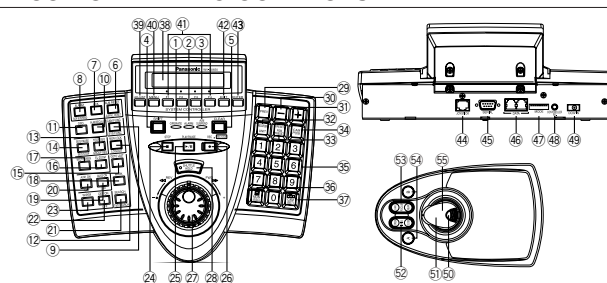

- | | |
|---|----------------|
| ① Operation indicator | ③④ ③③ ④① ④② ④③ |
| ② Alarm indicator | ① ② ③ |
| ③ Alarm suspend indicator | ④ |
| ④ Shift button | ⑤ |
| ⑤ Clear button | ⑥ |
| ⑥ Alarm reset/Alarm all reset button | ⑦ |
| ⑦ Alarm Acknowledge button | ⑧ |
| ⑧ Alarm/Alarm suspend button | ⑨ |
| ⑨ Camera function/System function button | ⑩ |
| ⑩ Alarm recall button | ⑪ |
| ⑪ On-screen display button | ⑫ |
| ⑫ Monitor lock/Log-out button | ⑬ |
| ⑬ Tour sequence/Group sequence button | ⑭ |
| ⑭ Sequence pause/Sequence stop button | ⑮ |
| ⑮ Go to last button | ⑯ |
| ⑯ Electronic zoom button | ⑰ |
| ⑰ Multiscreen selection button | ⑱ |
| ⑱ Mark button | ⑲ |
| ⑲ Auxiliary 2 ON/OFF button | ⑳ |
| ⑳ Auxiliary 1 ON/OFF button | ㉑ |
| ㉑ Search/Time and date search button | ㉒ |
| ㉒ Defroster button | ㉓ |
| ㉓ Wiper button | ㉔ |
| ㉔ Stop button | ㉕ |
| ㉕ Play/Pause button | ㉖ |
| ㉖ Recording button | ㉗ |
| ㉗ Shuttle ring (Outside)/JogDial (Inside) | ㉘ |
| ㉘ Shuttle hold button | ㉙ |
| ㉙ Preview button | ㉚ |
| ㉚ - button | ㉛ |
| ㉛ + button | ㉜ |
| ㉜ Recorder/Unit Selection button | ㉝ |
| ㉝ Preset/Program preset button | ㉞ |
| ㉞ Camera position button | ㉟ |
| ㉟ Numeric buttons | ㊱ |
| ㊱ Monitor/Escape button | ㊲ |
| ㊲ Camera/Set button | ㊳ |
| ㊳ LCD | ㊴ |
| ㊴ LCD adjustment button | ㊵ |
| ㊵ Menu button | ㊶ |
| ㊶ Function buttons | ㊷ |
| ㊷ Exit button | ㊸ |
| ㊸ Enter button | ㊹ |
| ㊹ Joystick connector | ㊺ |
| ㊺ Serial port | ㊻ |
| ㊻ Data ports | ㊼ |
| ㊼ Mode Selection switches | ㊽ |
| ㊽ Controller Number switch | ㊾ |
| ㊾ DC 9V Input jack | ㊿ |
| ㊿ Top button | 1 |
| 1 Zoom wheel controller | 2 |
| 2 Iris control buttons | 3 |
| 3 Focus control buttons | 4 |
| 4 A and B buttons | 5 |
| 5 3D joystick | |

DIMENSIONS

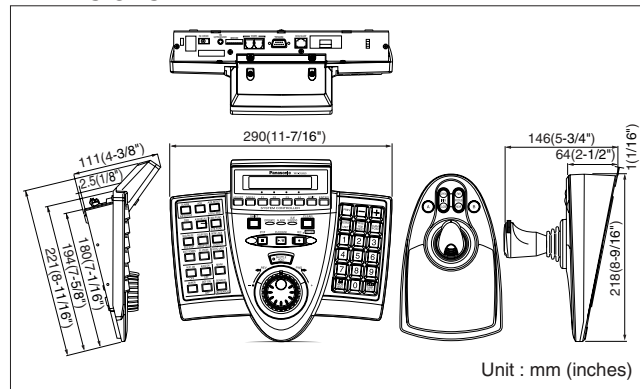

Unit : mm (inches)