



# Dell Latitude E-Docking Spacer



## Overview

The docking connector for most of the Latitude E-series systems is towards the middle of the system's backend. But, for specific Latitude notebooks, the docking connector is located towards the edge of the backend of the system. Docking spacer is required to dock your system in the right position. It is recommended that you use the docking spacer only for systems mentioned in the compatibility list.

Dell Part# : **452-BBTR**

## Compatibility

This product is compatible with the following systems:

- Precision 15 7000 Series (7510)

## Tech Specs

### Features

Docking spacer is required to dock system in the right position

### Product Type

Latitude E-Docking Spacer